




2017 - 2020 Ford F350 DRW

Relearn: Triggering tool required¹

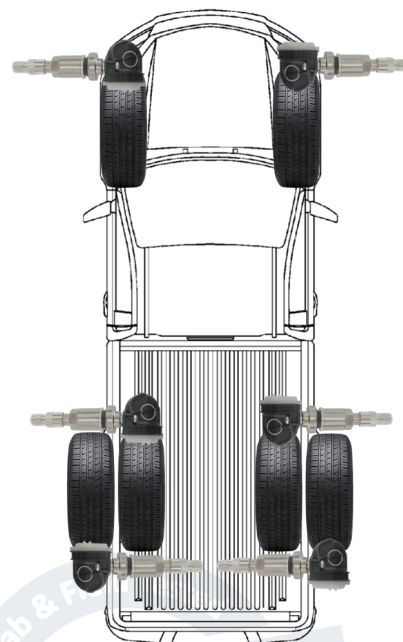


**All Sensors*: 9291
Valve: VS-241**

***Also covered by REDI-Sensor 7003A and Dill 5002**

¹Perform relearn before installing the outer rear wheels on the vehicle.

2020 Transit DRW

Relearn: Triggering tool required¹

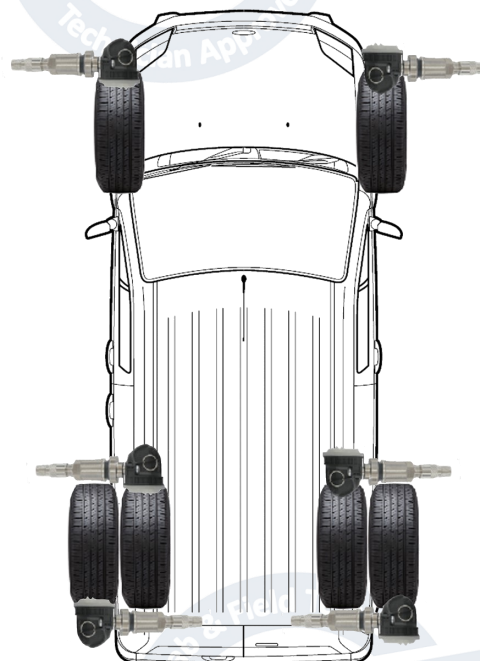

**All Sensors*: 9291
Valve: VS-241**

***Also covered by REDI-Sensor 7003A and Dill 5002**

¹Perform relearn before installing the outer rear wheels on the vehicle.